

# LTECH

## UX7 TOUCH PANEL (RGB)



Manual

[www.ltech-led.com](http://www.ltech-led.com)

## Technical Specs

### UX7 RGB Touch Panel

Input Voltage:	5Vdc, 0.5A~1A (with an adapter)	Weight(N.W.): 230g Weight(G.W.): 370g
Output Signal:	RF 2.4GHz, DMX512	
Control Mode:	RGB, 4 Zones Control	
Working Temp.:	-30°C~55°C	
Package Size:	L132×W192×H50(mm)	

### R4-3A Constant Voltage Receiver (receiver is sold separately)

Wireless Signal:	RF 2.4GHz	Working Temp.: -30°C~55°C
Input Voltage:	5~24Vdc	Package Size: L127×W35×H24(mm)
Current Load:	3A×4CH Max. 12A	Weight(G.W.): 60g
Output Power:	Max. 60W/144W/288W(5V/12V/24V)	

### R4-5A Constant Voltage Receiver (receiver is sold separately)


Wireless Signal:	RF 2.4GHz	Working Temp.: -30°C~55°C
Input Voltage:	5~24Vdc	Package Size: L178×W48×H33(mm)
Current Load:	5A×4CH Max. 20A	Weight(G.W.): 150g
Output Power:	Max. 100W/240W/480W(5V/12V/24V)	

### R4-CC Constant Current Receiver (receiver is sold separately)


Wireless Signal:	RF 2.4GHz	Working Temp.: -30°C~55°C
Input Voltage:	12~48Vdc	Package Size: L178×W48×H33(mm)
Output Voltage:	3~46Vdc	Weight(G.W.): 165g
Output Current:	CC 350/700/1050mA×4CH	
Output Power:	1.05W~48.3W×4CH Max. 193.2W	

## Product Size:


The unit: mm

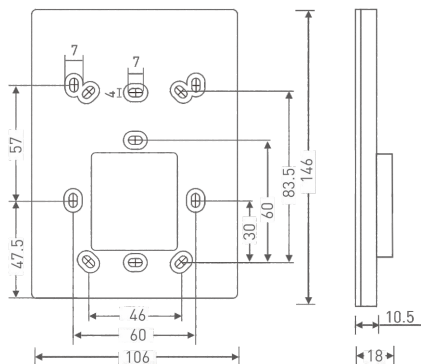

Touch Panel



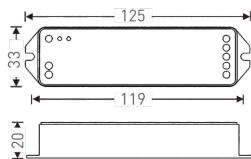


R4-3A

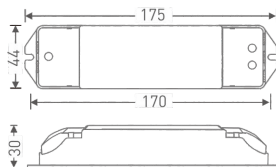


R4-5A/R4-CC


## Terminals

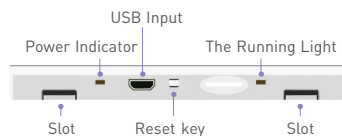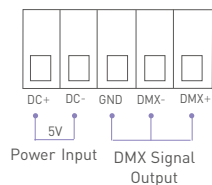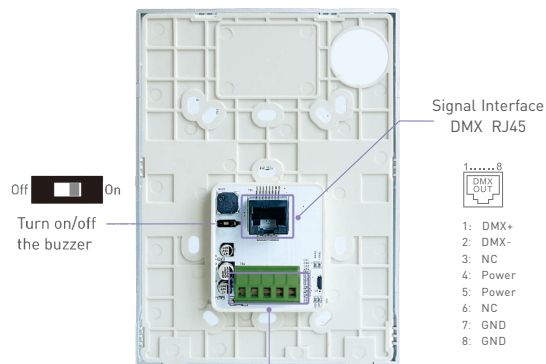


# Installation Instruction:

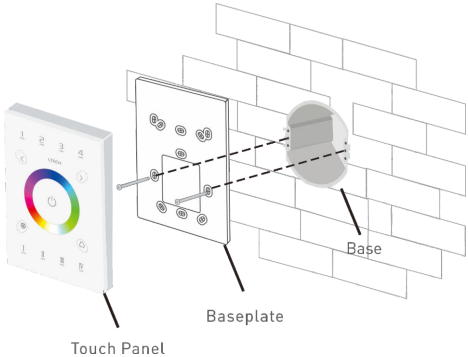


1. Install the base into the wall. Typical bases as below:

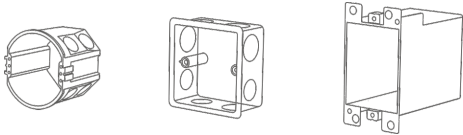


2 Use a straight screwdriver to pry the position shown:

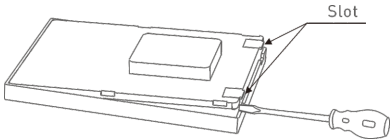

3. Screw the baseplate and the base in the wall firmly.



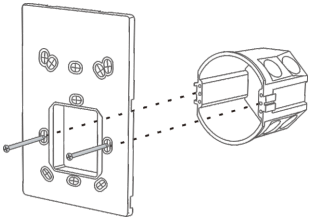


4 Connect in a right way and put the power adapter into the base.

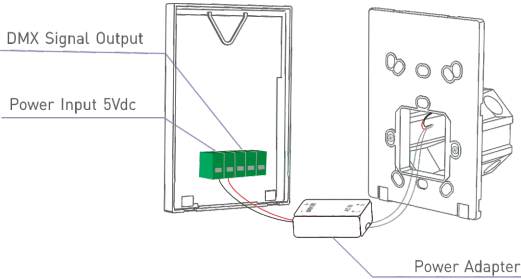

## Key Functions

- 5 Embed the upper touch panel into the baseplate and then tap the bottom to press into the slots.

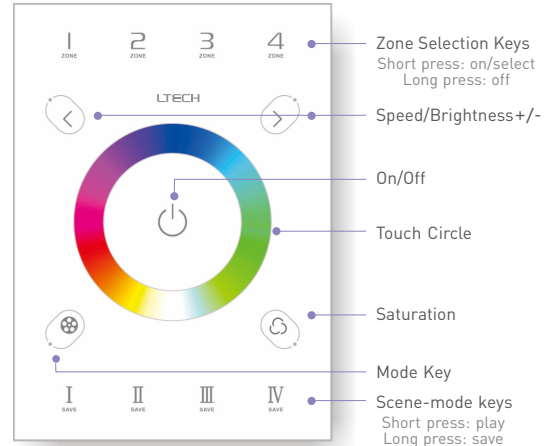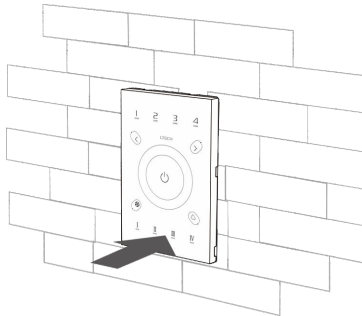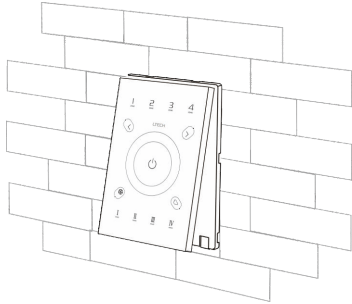









**The Changing Mode** (Press  to Select):













- |                     |                 |                     |                  |
|---------------------|-----------------|---------------------|------------------|
| 1. Static Red       | 2. Static Green | 3. Static Blue      | 4. Static Yellow |
| 5. Static Purple    | 6. Static Cyan  | 7. Static White     | 8. RGB Jumping   |
| 9. 7 Colors Jumping | 10. RGB Smooth  | 11. 7 Colors Smooth |                  |

## Application Composition



### DMX512 Signal Output :

1.  Touch panel (UX7)
2.  Touch panel (UX7) +  Remote (V7)
3.  Touch panel (UX7) +  WiFi master controller (WiFi-104)
4.  Touch panel (UX7) +  WiFi master controller (WiFi-104) +  Remote (V7)


### Wireless Control:

1.  Touch panel (UX7) +  Wireless receiver (R4-3A/5A, R4-CC)
2.  Touch panel (UX7) +  Remote (V7) +  Wireless receiver (R4-3A/5A, R4-CC)
3.  Touch panel (UX7) +  WiFi master controller (WiFi-104) +  Wireless receiver (R4-3A/5A, R4-CC)
4.  Touch panel (UX7) +  WiFi master controller (WiFi-104) +  Remote (V7) +  Wireless receiver (R4-3A/5A, R4-CC)

## DMX Output Wiring

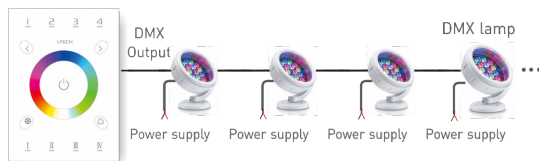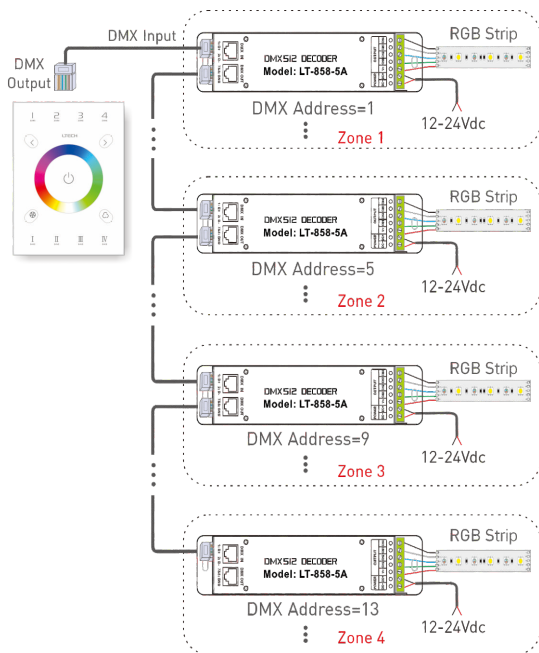

## RF Wireless Wiring

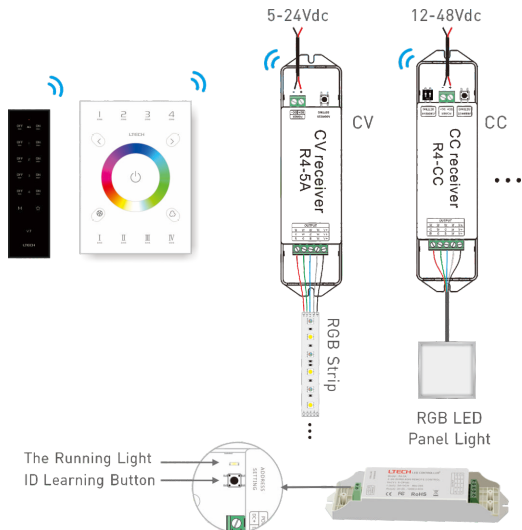

### Match / Clear Code between UX7 (V7) & Receivers


Match Code:

Short press "ID learning button" on receiver (R4-3A/5A, R4-CC), then press any zone key on UX7 or V7, if the LEDs flicker once, match successfully.

Clear Code:

Long press "ID learning button" on receiver(R4-3A/5A, R4-CC) for 5 seconds, if the LEDs flicker twice, deactivate the matching successfully.

## DMX System Wiring

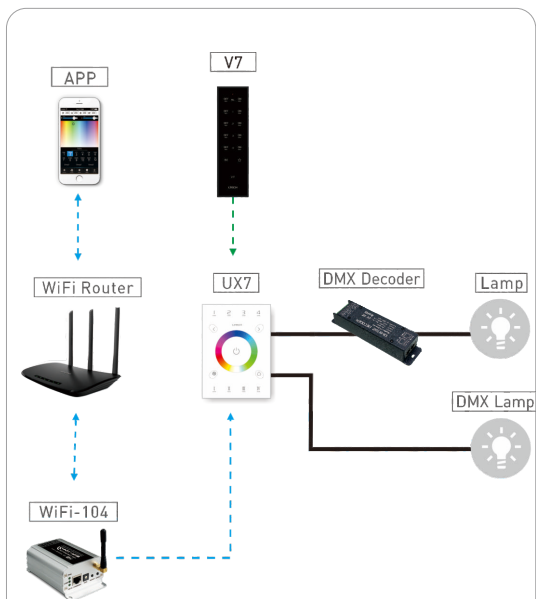


\* PS: No WiFi router needed when WiFi-104 work with phones directly.

### Match Code Sequence

1. Configure WiFi-104 with UX7, which enables the smart phone to control DMX device via WiFi-104.
2. Configure V7 with UX7, which enables V7 to control DMX device.

## Wireless System Wiring

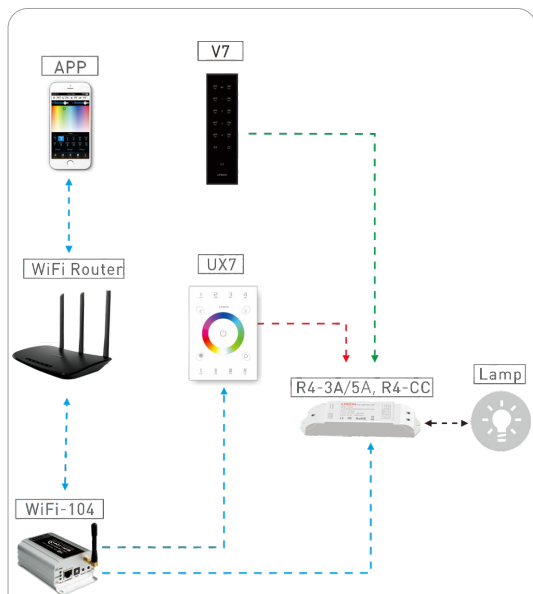


\* PS: No WiFi router needed when WiFi-104 work with phones directly.

### Match Code Sequence

1. WiFi-104 & UX7
2. UX7 & R4-5A/R4-CC
3. V7 & R4-5A/R4-CC

## Match / Clear Code for UX7 & WiFi-104, V7, UX7

### Match Code:

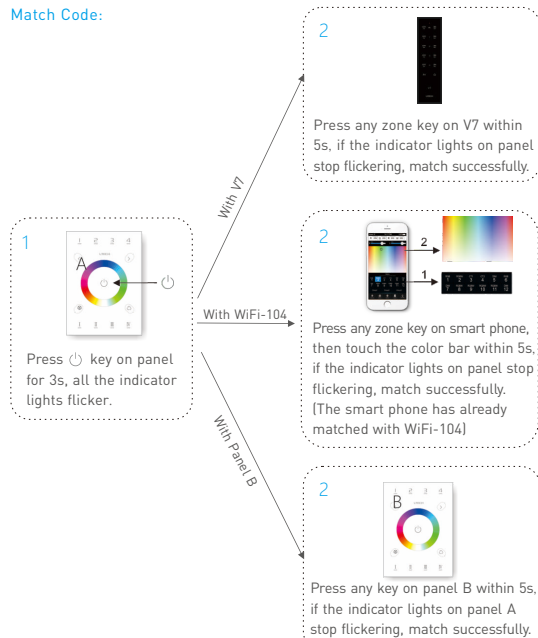

### Clear Code:

