



# 2 4G LED RGBW Controller









# Main Characteristics


## F8 RF RGBW Remote Control

Remote Option: RGBW, 4 zones control 3Vdc (Battery CR2032) Working Voltage:

Wireless Frequency: 2 4GHz Working Temperature: -30 ~55

Package Size: L150×W46×H18(mm)

Weight(G.W.): 85q

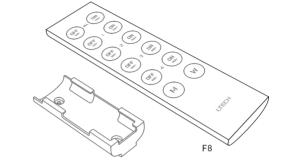

# F4-3A CV Receiver


5~24Vdc Input Voltage:

3A × 4CH Max. 12A Current Load:

Max Output Power: 60W/144W/288W(5V/12V/24V) -30 ~55 Working Temperature:

Package Size: L127×W35×H24(mm)

Weight(G.W.): 60a



## F4-CC CC Receiver

Input Voltage: 12~48Vdc 3~46Vdc Output Voltage:

CC 350/700/1050mA×4CH Output Current: Output Power: 1 05W~48 3W×4CH Max 193 2W

-30 ~55 Working Temperature:

L178×W48×H33(mm) Package Size:

Weight(G.W.): 165q

## F4-5A CV Receiver

5~24Vdc Input Voltage:

Current Load: 5A × 4CH Max. 20A

Max Output Power: 100W/240W/480W(5V/12V/24V)


Working Temperature: -30 ~55


Package Size: L178×W48×H33(mm)


Weight(G.W.): 150a

Note: Receiver is sold separately.

## **Dimensions**

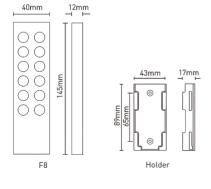

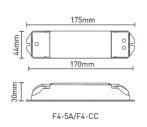

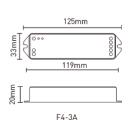






# **Operating Instruction for Remote:**

# operating instruction for Kemote



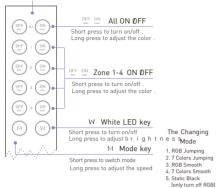

## Match/Clear code between remotes

indicator light keeps

on after release.





Then press any key on A in 5 seconds.

When the indicator

light of B turns off.

match successfully.

#### Clear code:



Press the bottom two keys of B simultaneously (about 6 seconds) until the indicator light keeps on, deactivated the matching successfully.

## Match/Clear code between remote and receiver

## Match code:

#### Method 1

Step 1. Power on the receiver, and complete step 2 in 10 seconds.

Step 2. Long press the matching zone key "ON", "OFF"

ID learning butto

on the remote simultaneously, the lamps flicker several times, the buzzer beep once, match successfully.

#### Clear code:

#### Method 1:

Power on and off the receiver continuously for 5 times, If the buzzer long beep and lamps flicker twice, deactivate the matching successfully.



### Method 2:

Step 1. Short press the ID learning button on the receiver, the buzzer beep once.

Step 2. Long press the matching zone key "ON", "OFF" on the remote simultaneously, the lamps flicker several times, the buzzer beep once, match successfully

#### Method 2:

Long press "ID learning button" on receiver for 5 seconds, If the lamps flicker twice, deactivate the matching successfully.



# Wiring Diagram:

